


4-EVENT TIMER & CLOCK

Counts 100 hours by minutes & seconds

- Counts up & down in 4 channels separately or simultaneously
- Individual channel sounds
- Programmable
- Dual function
- Memory
- Clock
- Stopwatch
- Loud & long alarm
- Stop & restart
- Counts up after zero
- Sliding mode switch
- International time
- 3-way mounting: pocket clip, magnet, stand
- Battery & instructions included

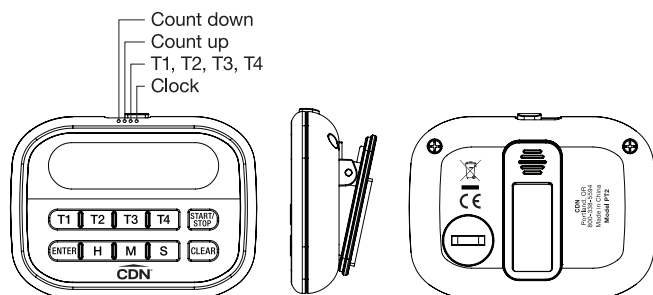

Note: Remove label from display before initial use.

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

BATTERY INSTALLATION

Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery door by turning it counterclockwise.
2. Install a 1.5 V button battery with positive (+) side up.
3. Replace battery door and lock it by turning it clockwise.

⚠ WARNING

- **INGESTION HAZARD: DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- For treatment information call: [phone number for the National Battery Ingestion Hotline, currently 1-(800) 498-8666].



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The compatible battery type is LR44.
- The nominal battery voltage of the LR44 is 1.5V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 104°F (40°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or




dispose of batteries from equipment not used for an extended period of time according to local regulations.



- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

OPERATING INSTRUCTIONS



A. Set Clock

1. Select CLOCK mode with sliding mode switch. **12:0000 AM** will appear after inserting battery. 
2. Press and hold ENTER approximately 2 seconds until the display flashes.
3. Press HR, MIN and SEC to enter the desired time. Press and hold button for fast advance.
4. Press ENTER to exit. The PT2 will automatically exit 3 seconds after the last entry.

B. Count Down

1. Select COUNT DOWN mode with sliding mode switch. **COUNT DOWN** will appear on the display. 
2. Press HR, MIN and/or SEC to enter the desired time. Press and hold button for fast advance.
3. Press START/STOP to start the count down. Press START/STOP button to interrupt the count. Press START/STOP button again to resume the count.
4. When the desired time is reached, alarm will sound and the timer will start to count up the "overtime". **OT** (OverTime) and **COUNT UP** will appear on the display while **TIME'S UP** flashes. 
5. Press START/STOP to stop the alarm. The alarm will stop automatically after 60 seconds while the count up continues.
6. Press CLEAR to reset to **0:0000**.
Note: The timer will retain any time showing on the display when the sliding mode switch is moved to another position.

C. Count Up

1. Select COUNT UP mode with sliding mode switch. **COUNT UP** will appear on the display. 
2. Press START/STOP to start the count up. If desired, the PT2 can count up from any desired time by entering that time with the HR, MIN and SEC buttons.
3. Press START/STOP button to interrupt the count. Press START/STOP button again to resume the count.
4. Press CLEAR to reset to **0:0000**.
5. The PT2 will count up to 99 hours, 59 minutes, and 59 seconds and stop at **0:0000**, at which time an alarm will sound and **TIME'S UP** will flash for 60 seconds. Press any button to stop alarm. 
Note: The timer will retain any time showing on the display when the sliding mode switch is moved to another position.

D. Programming 4 Events

This device allows 4 different count down timer settings temporarily or programmed into memory (T1, T2, T3 and T4) with respective alarm beeping sequences:


T1: BEEP in 1 second

T2: BEEP BEEP in 1 second

T3: BEEP BEEP BEEP in 1 second


T4: BEEP BEEP BEEP BEEP in 1 second

1. Count Down

- a. Select PROGRAM TIMER mode with sliding mode switch. **T1** and **COUNT DOWN** will appear on the display. 
- b. Press T1 to enter Timer 1 set mode. **T1** on the display will be steady. If a time had previously been entered in T1, it will appear on the display. To enter a new time press CLEAR. If a pre-set time had been entered into T1 memory, press CLEAR and then press ENTER to clear memory.
- c. Press HR, MIN and/or SEC to enter the desired time. The edited time setting will remain there as long as the counting cycle is not started/completed and user may switch to other operations.
- d. To store time in memory, press ENTER after entering the desired time. Memory is required for simultaneous counting.
Note: Any time already in memory will be deleted when the new time is entered into memory.
- e. Press START/STOP to start counting down. The count may be interrupted by pressing START/STOP. To resume the count press START/STOP again.
- f. When the desired time is reached, alarm will sound and **TIME'S UP** will flash on the display.
- g. Press any button to stop the alarm and reset to **0:0000**.
- h. Repeat steps b through g for T2, T3 and T4.

 
2. Count Up

T1, T2, T3 & T4 can be used as count up timers starting from **0:0000**.

- a. Press START/STOP to start counting up or to pause and resume count. 
- b. The PT2 will count up to 99 hours, 59 minutes, and 59 seconds and stop at **0:0000**, at which time an alarm will sound and **TIME'S UP** will flash for 60 seconds. Press START/STOP to stop alarm.
Note: The timer will retain any time showing on the display when the sliding mode switch is moved to another position.

3. 4-Event Simultaneous Operation

T1, T2, T3 & T4 can be used simultaneously. The **T-number** for the channel selected will be steady while other channels counting will be flashing.



- a. To activate T1, T2, T3 & T4 simultaneously, hold ENTER and press START/STOP. Timers will start counting down from the pre-set times stored in their respective memory or count up if there is no stored setting.
- b. If two or more channels reach zero at the same time, the channel with the lowest T-number will sound first and then the other channels will sound in descending order. For example, if T1, T2 and T4 reach zero simultaneously, T1 will sound first, then T2, followed by T4.
- c. Press any button to stop alarm.
- d. To stop activated timers simultaneously, hold ENTER and press START/STOP (even though they were activated individually).

CARE OF YOUR PRODUCT

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

CE Note: This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship (excluding batteries) within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947 USA. This warranty does not cover damage in shipment or failure caused by failure to adhere to the accompanying instructions, inadequate maintenance, normal wear and tear, tampering, accident, misuse, unauthorized modification, obvious carelessness or abuse. CDN shall not be liable for any consequential or incidental damages whatsoever.

For more detailed information on our products, please visit CDNmeasurement.com or call 800-338-5594.

