


## MULTI-TASK TIMER & CLOCK

*Counts 24 hours by minutes & seconds*

- Counts up & down
- Dual function
- Memory
- Clock
- Stopwatch
- Loud & long alarm
- Stop & restart
- Lock
- Counts up after zero
- Sliding mode switch
- International time
- 3-way mounting: pocket clip, magnet, stand
- Battery & instructions included

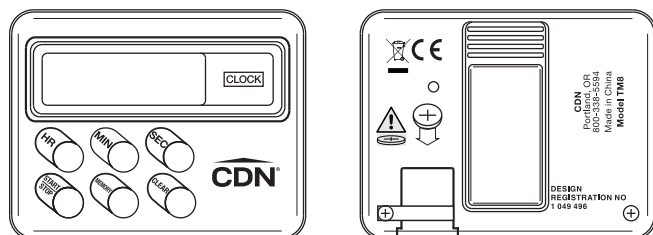

**Note:** Remove label from display before initial use.

**Note:** In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

### BATTERY INSTALLATION

Battery is installed. Replace battery when LCD becomes dim or alarm level declines.

1. Using a small Phillips screwdriver, remove the screw on the back by turning it counter clockwise.  
**Note:** Be careful to use a properly-sized screwdriver as a screwdriver too large will strip the screwtops.
2. Remove battery cover on the back by sliding it in the direction of the arrow.
3. Install one LR44 battery, positive (+) side up.  
A brief alarm sounds.
4. Replace the battery cover until it clicks shut

and fasten the screw on the back by turning it clockwise, being careful not to over-turn

### **WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- For treatment information call: [phone number for the National Battery Ingestion Hotline, currently 1-(800) 498-8666].



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The compatible battery type is LR44.
- The nominal battery voltage of the LR44 is 1.5V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 104°F (40°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

# OPERATING INSTRUCTIONS

## A. Set Clock

1. Slide switch on the right side to CLOCK to select clock mode. **AM** or **PM** appears on the display in 12-hour time.
2. Press and hold the CLEAR button for 2 seconds to switch between 12-hour, AM/PM time, and 24-hour, international time.
3. Press the HR MIN and/or SEC buttons to enter the desired time. Press and hold for fast advance.

## B. Count Down

1. Slide switch on the right side to TIMER to select the count down mode. **TIMER** appears on the display.
2. Press the HR MIN and/or SEC buttons to enter the desired time. Press and hold for fast advance.  
**Note:** The timer retains any time showing on the display when the sliding mode switch is moved to another position.
3. Press the MEMORY button to enter the set time into memory. **MEMORY** appears on the display.
  - a. Press the MEMORY button to recall the set time.
  - b. Press the MEMORY button, then press the CLEAR button, to clear the set time from memory.
4. Press the START/STOP button to start counting down.  
**Note:** **TIMER** flashes on the display during count down when in other modes.
5. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
6. The alarm sounds and **TIME'S UP** flashes on the display when the count reaches **0:0000**. The timer counts up the overtime since reaching **0:0000**. The maximum overtime is 10 hours.
7. The alarm and flashing stop automatically after 60 seconds while the count up continues. Press START/STOP to stop the alarm and the count up, and reset to **0:0000**.
8. Press CLEAR when timer is stopped to reset to **0:0000**.

## C. Count Up – Stopwatch

1. Slide switch on the right side to COUNT UP to select the count up mode. **COUNT UP** appears on the display.
2. Press the START/STOP button to start counting up.  
**Note:** **COUNT UP** flashes on the display during count up when in other modes.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. Press CLEAR when timer is stopped to reset to **0:0000**.  
**Note:** The timer retains any time showing on the display when the sliding mode switch is moved to another position.

## CARE OF YOUR PRODUCT

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



**5-Year Limited Warranty:** Any instrument that proves to be defective in material or workmanship (excluding batteries) within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947 USA. This warranty does not cover damage in shipment or failure caused by failure to adhere to the accompanying instructions, inadequate maintenance, normal wear and tear, tampering, accident, misuse, unauthorized modification, obvious carelessness or abuse. CDN shall not be liable for any consequential or incidental damages whatsoever.

For more detailed information on our products, please visit [CDNmeasurement.com](http://CDNmeasurement.com) or call 800-338-5594.

**CE Note:** This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

