



THE TIME & TEMPERATURE COMPANY®

Model: IRT220-F

ProAccurate® Insta-Read® Beverage & Frothing Thermometer

0 to 220°F

Perfect For


- Small frothing pitchers

Easy To Use

- 1 1/2" / 2.5 cm magnified dial
- Target range indication
- Calibration tool on sheath
- Exclusive, adjustable stainless steel clip

Features

- NSF® Certified
- 5" / 12.7 cm stem
- Waterproof
- Shatterproof
- Polycarbonate lens
- Stainless steel housing
- Field calibration
- Food-safe ABS plastic sheath with BioCote®
- Sheath can be used as handle extension
- Mounting: pocket clip

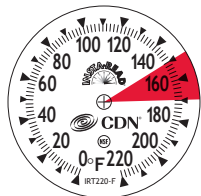

Get Professional Results Every Time!

- The IRT220-F measures the temperature of beverages and frothed milk quickly and accurately.
- A computer-designed stainless steel clip holds the thermometer stem snugly against any container. A positive lock, quick-release action, permits the thermometer stem to be adjusted to the desired height.
- When the clip is removed from the stem, this INSTA-READ® thermometer can be used for all general purpose cooking needs.
- Temperature and field calibration guides are available at www.cdn-timeandtemp.com


Note: Clean the thermometer stem before each use.

Important: Keep stem away from direct heat of the cooktop burner.

Important: DO NOT LEAVE IN HOT OVEN OR MICROWAVE.

CAUTION: Always position the IRT220-F on the pitcher/pot before filling it and/or applying heat.

Insert the stem through both holes in the attachment clip. Press the top portion of the clip together for easier sliding up the thermometer stem. Push the clip down onto the side of the pot and position it until the stem tip is just above the bottom of the pot.

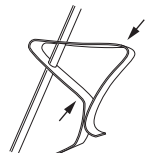

TEMPERATURE GUIDE

Steamed Milk	.. 150-170°F 66-77°C
Espresso 185-194°F 85-90°C
Black Tea 212°F 100°C
Green Tea 160-180°F 71-82°C



Antimicrobial properties are built-in to inhibit the growth of bacteria that may affect this product. According to EPA guidelines we cannot claim that the antimicrobial properties in this product protect users or others against bacteria, viruses, germs, or other disease organisms. This product does not protect users or

others against food-borne bacteria. Always clean and wash this product thoroughly before and after each use.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
info@cdn-timeandtemp.com
www.cdn-timeandtemp.com

